




Bus Bar Contact

Assembly Instructions PP180

Bus Bar Contact Assembly Instructions

1. Insert the contact into the D-shaped mounting hole in the bus bar.
2. Tighten the lock nut provided until the contact is locked securely in place (approximately 70 in.-lbs). **Do not grip nose of contact while tightening.**
3. Slide the connector housing over the contacts until the noses of both contacts snap firmly over the springs in the housing.
4. The bus bar connector is now secure and ready for use.

Panel Layout	-J*-	-K*-	-L-	-M-
inches	1.13	1.13	.375	.135
mm	28.6	28.6	9.53	3.43

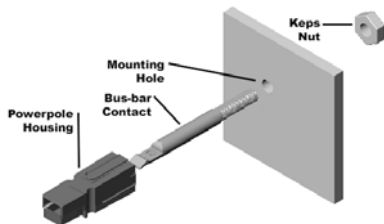

WARNING

* Assumes interlocked dovetails

UTMOST CAUTION SHOULD BE USED WHEN WORKING ON LIVE CONNECTOR CONTACTS

TRADEMARKS

"SB" and "Anderson Power Products" are registered U.S. and foreign trademarks of Anderson Power Products.



HEADQUARTERS: 13 Pratts Junction Road, P.O. Box 579, Sterling, MA 01564 T:978-422-3600 F:978-422-3700

EUROPE: Rathealy Road, Fermoy Co. Cork, Ireland T:353-(0)25-32277 F:353-(0)25-32296

ASIA/PACIFIC: IDEAL Anderson Asia Pacific Ltd., Unit 922-928 Topsail Plaza, 11 On Sum Street, Shatin N.T., Hong Kong T:852-2636-0836 F:852-2635-9036

www.andersonpower.com